



INSTRUKCJA MONTAŻU

FURTKA















KIERUNEK OTWIERANIA: LEWY





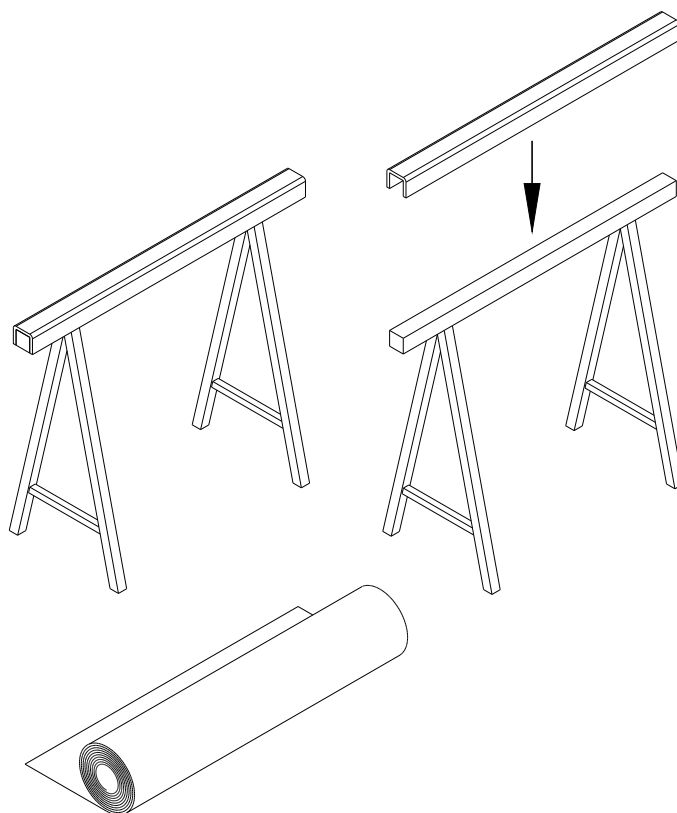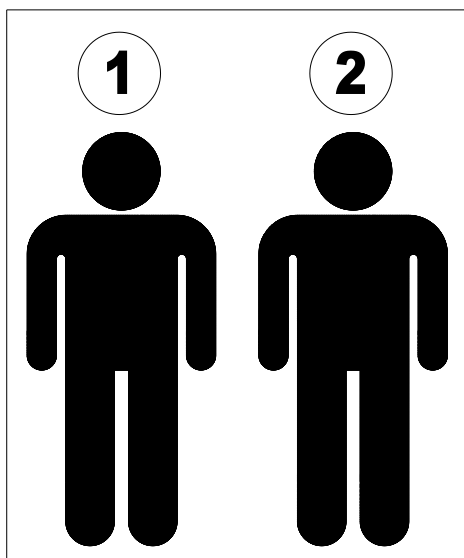


Wymagane narzędzia

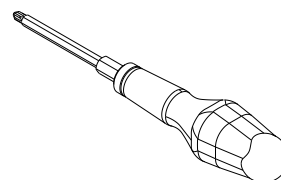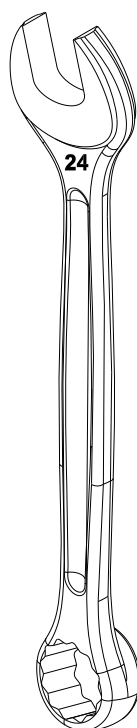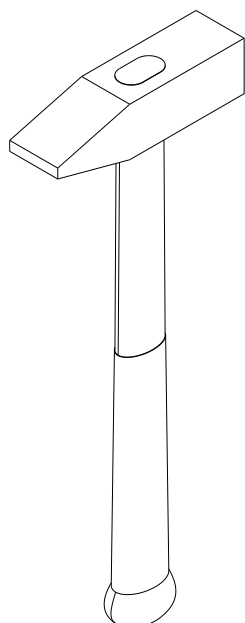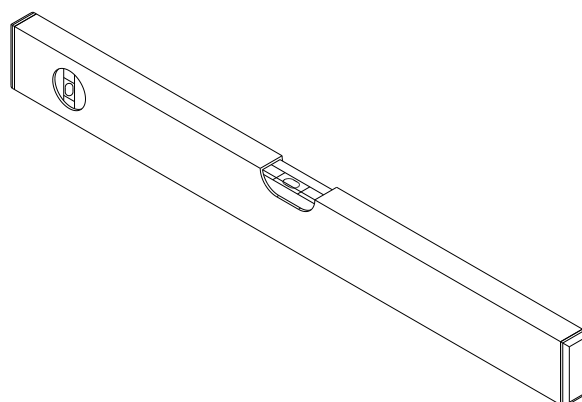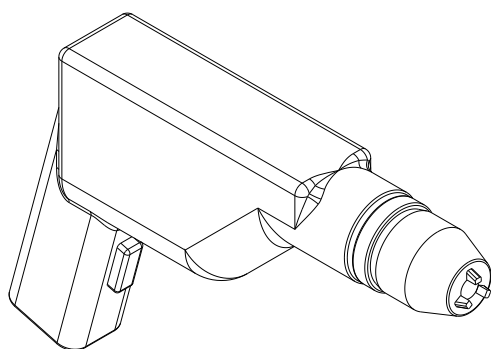


Słupy

2x

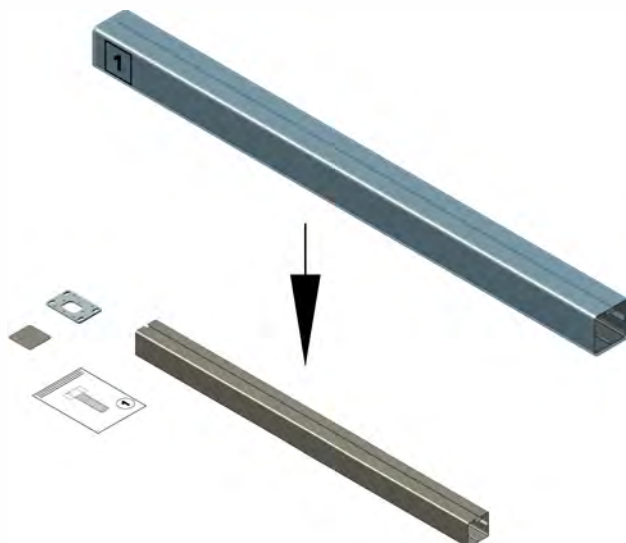


Paczka 1


















1x













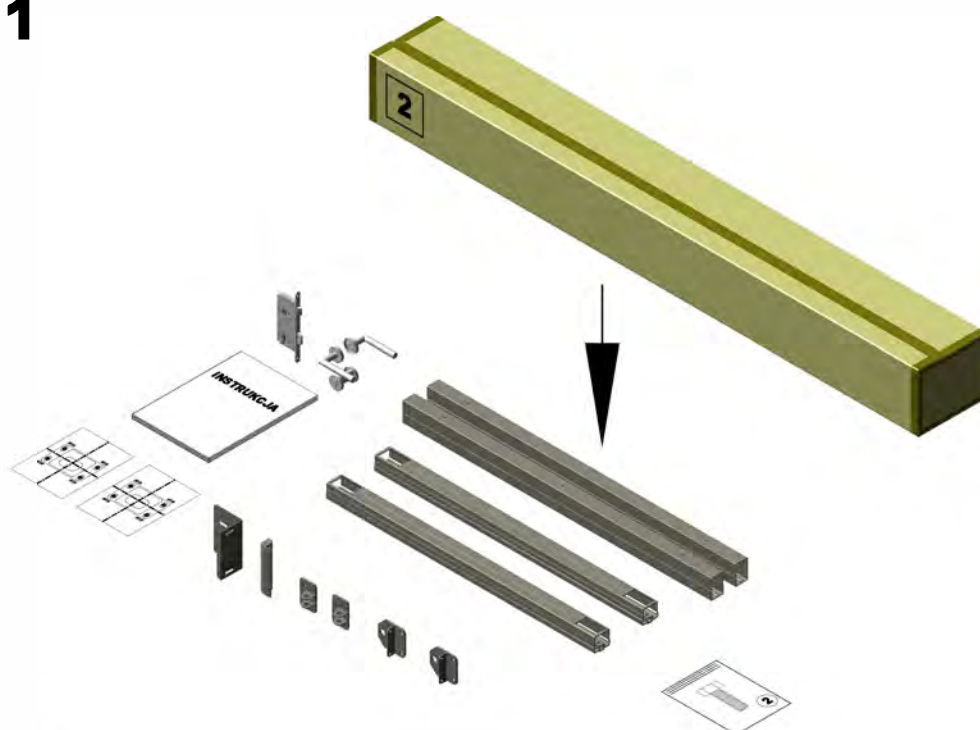



Paczka 2

1x

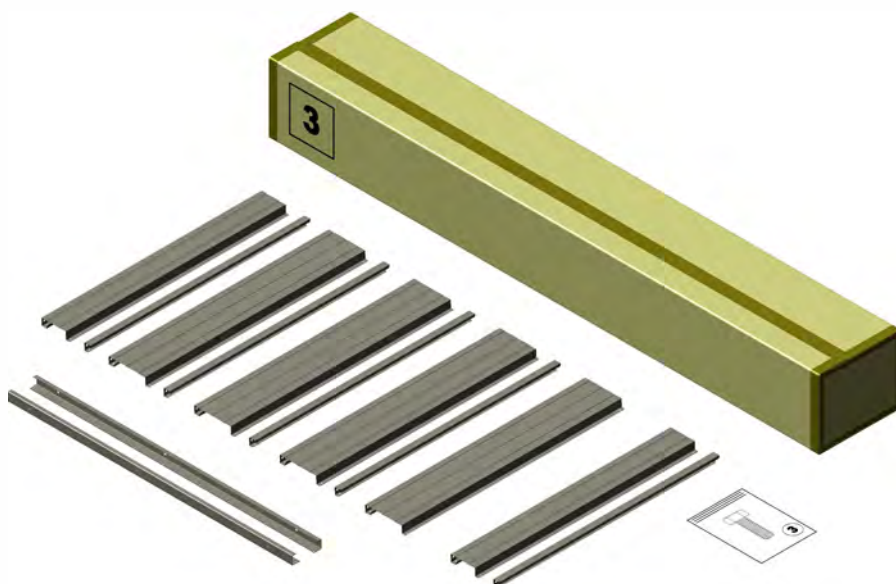

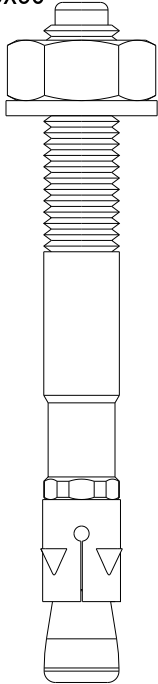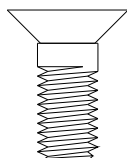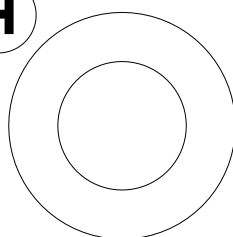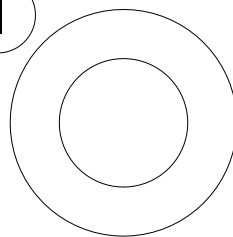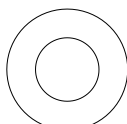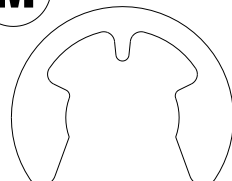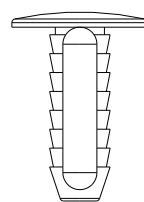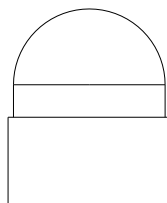
HSA M10x90 A  8x	M6x30 B  16x	M6x30 C  18x	M6x20 D  6x	M8x20 E  2x
	M5x16 F  2x	Ø6,3x13 G  26x	S16-PA H  4x	S16 I  4x
S8 J  2x	S6 K  16x	F6 L  10x	SS Ø16 M  2x	M16 N  4x
M8 O  2x	Ø7x23 P  8x	Ø5,6x15 Q  8x	Ø3,9x60 R  4x	
Ø14 S  8x	M10-SW17 T  8x			

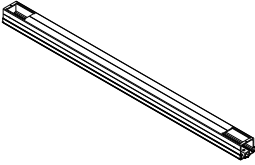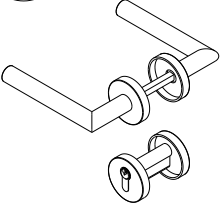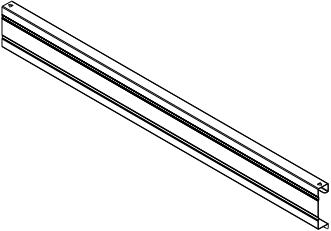
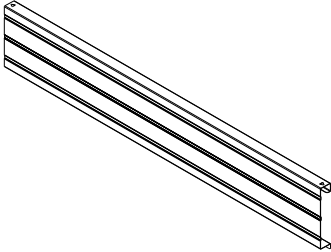
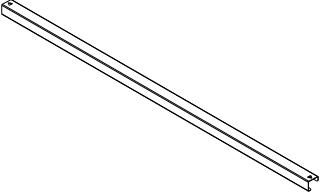
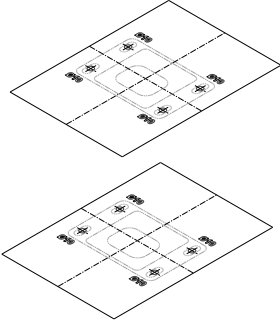
1  2x	2  1x	3  1x	4  2x	5  2x
6  2x	7  2x	8  1x	9  1x	10  1x
11  1x	12  2x	13  4x	14  1x	15  1x
16  3x	17  2x		18  4x	
19  5x		1x 		



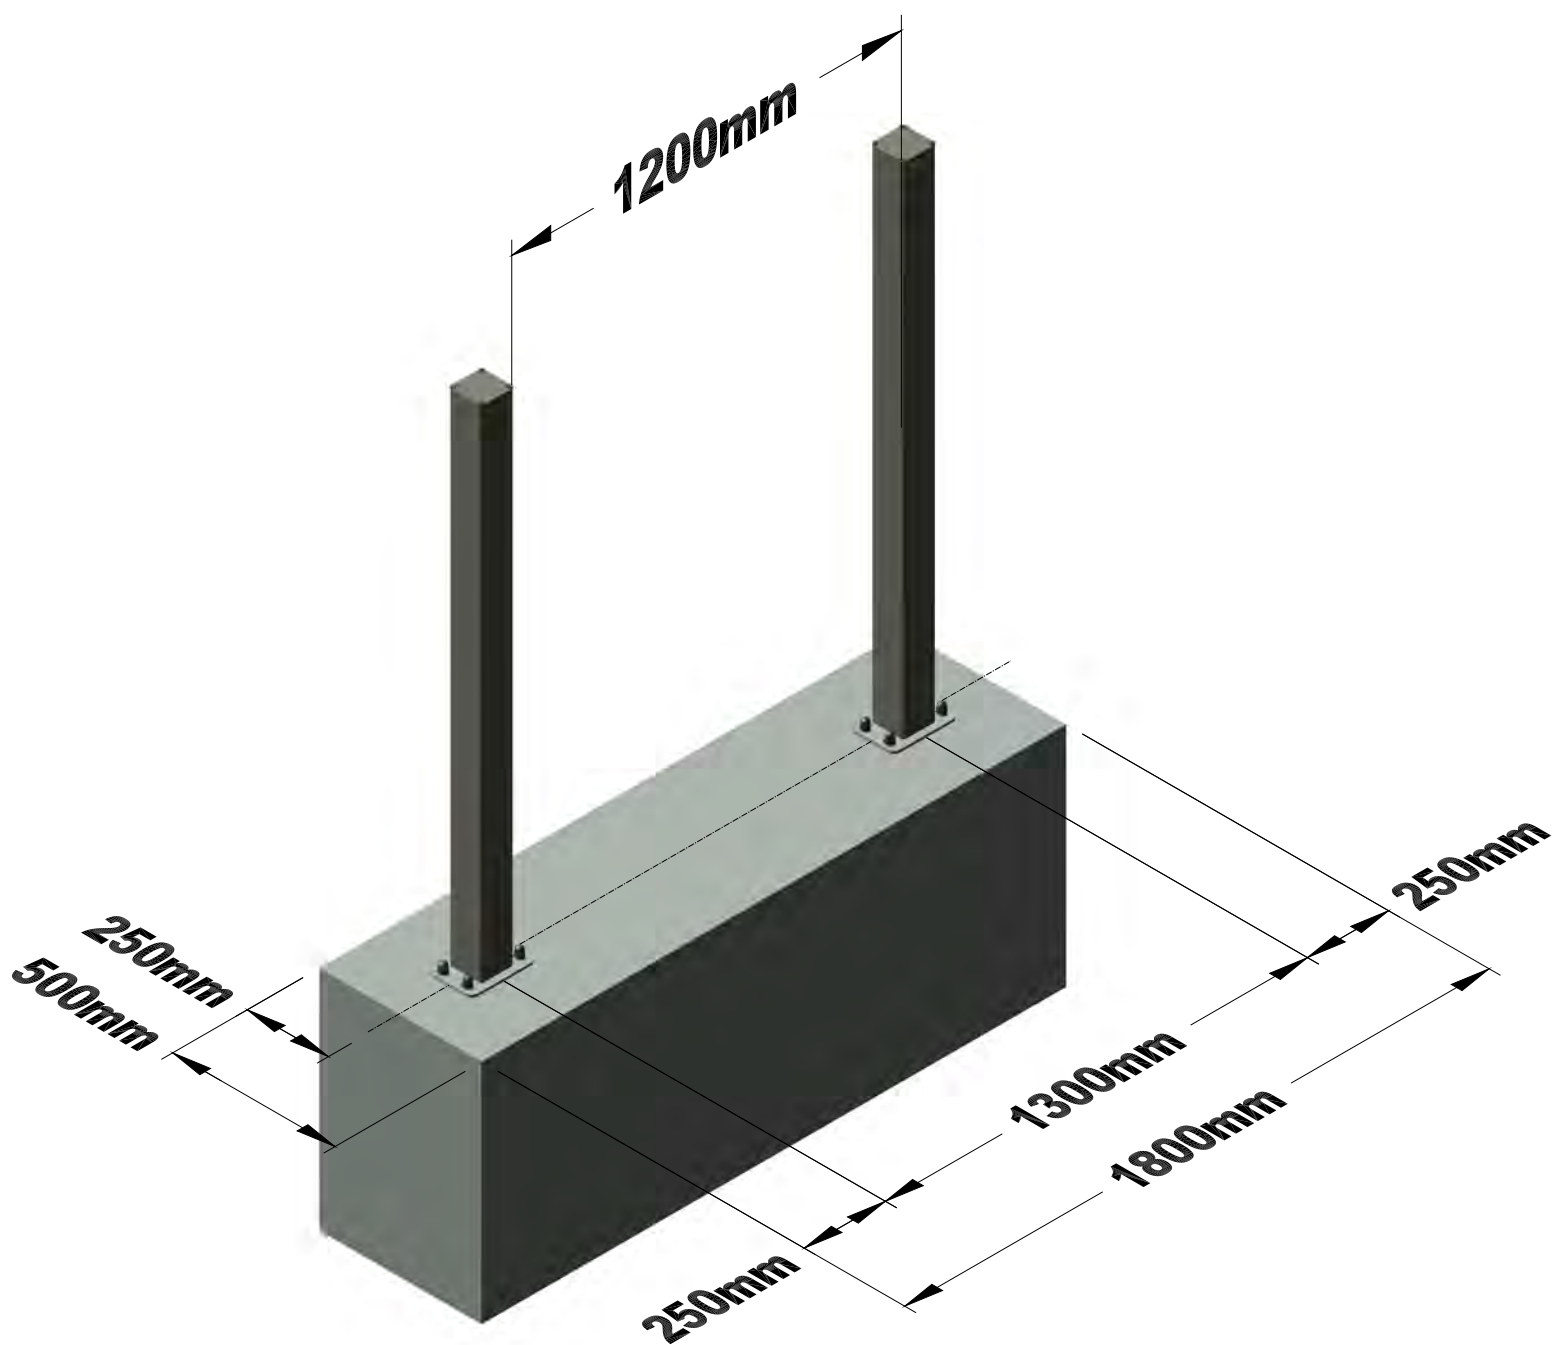


Paczka 1


2x


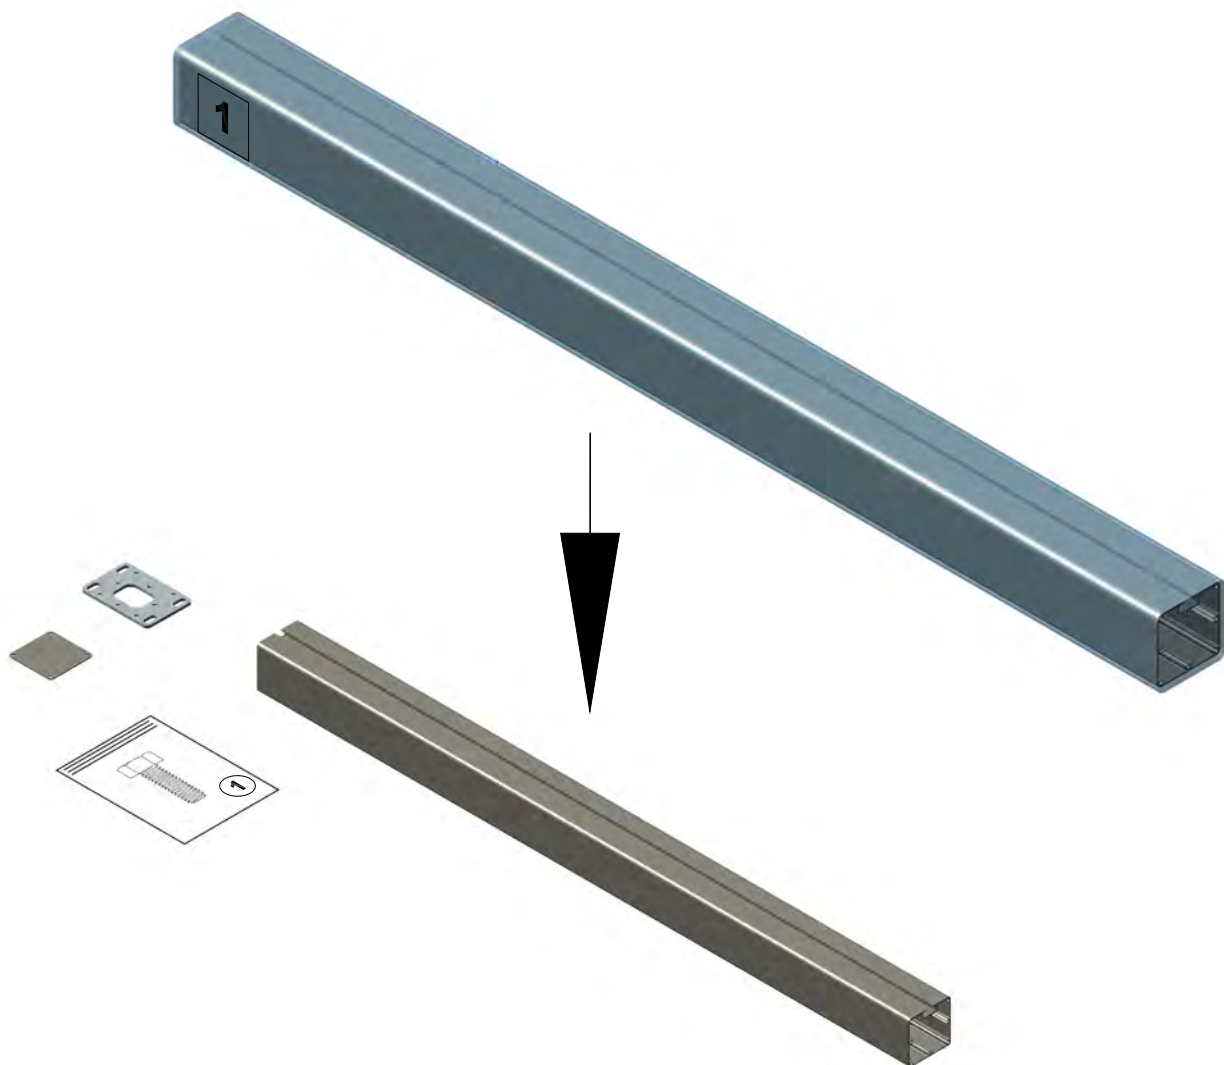







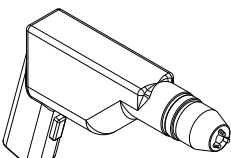
1  2x	3  2x	 TX30
	M6x30 B  16x	

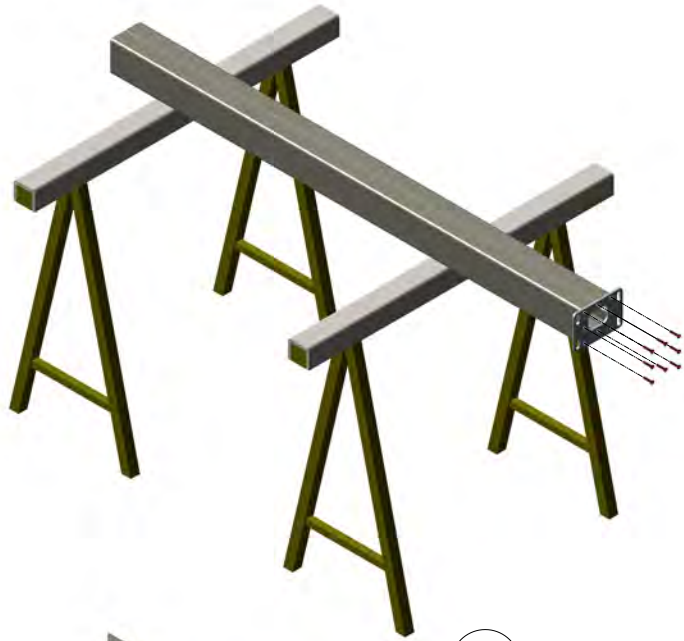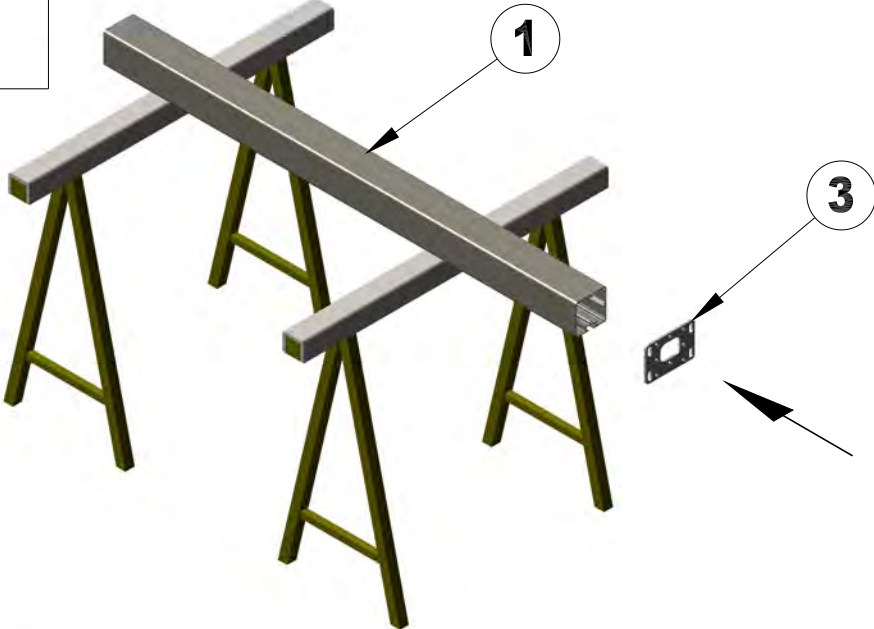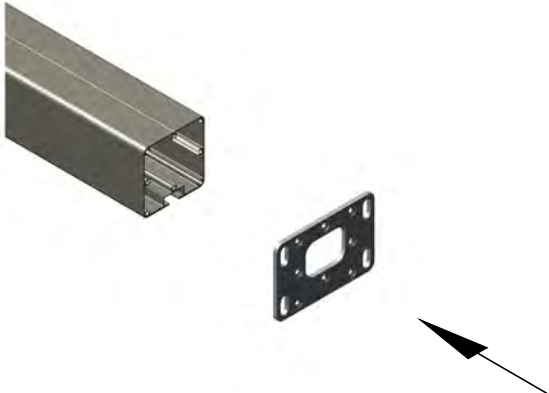








2x

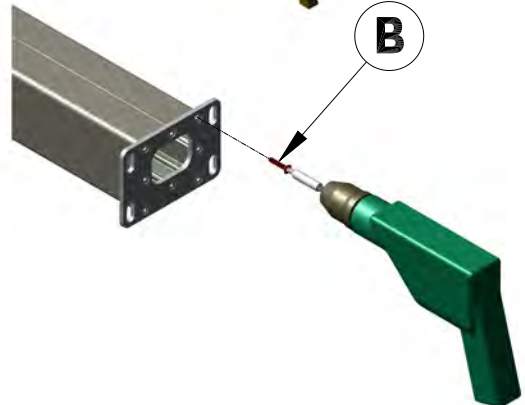


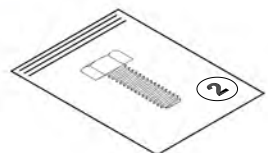
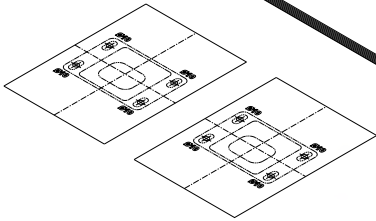


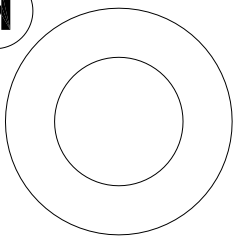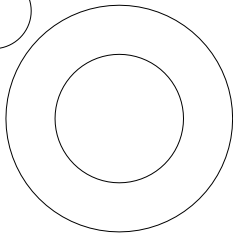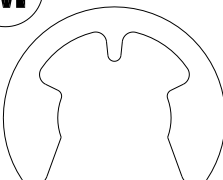4  2x	6  2x	7  2x	16  2x	M6x20 D  4x
S16-PA H  4x	S16 I  2x	S6 K  4x	F6 L  4x	SS Ø16 M  2x
M16 N  2x				



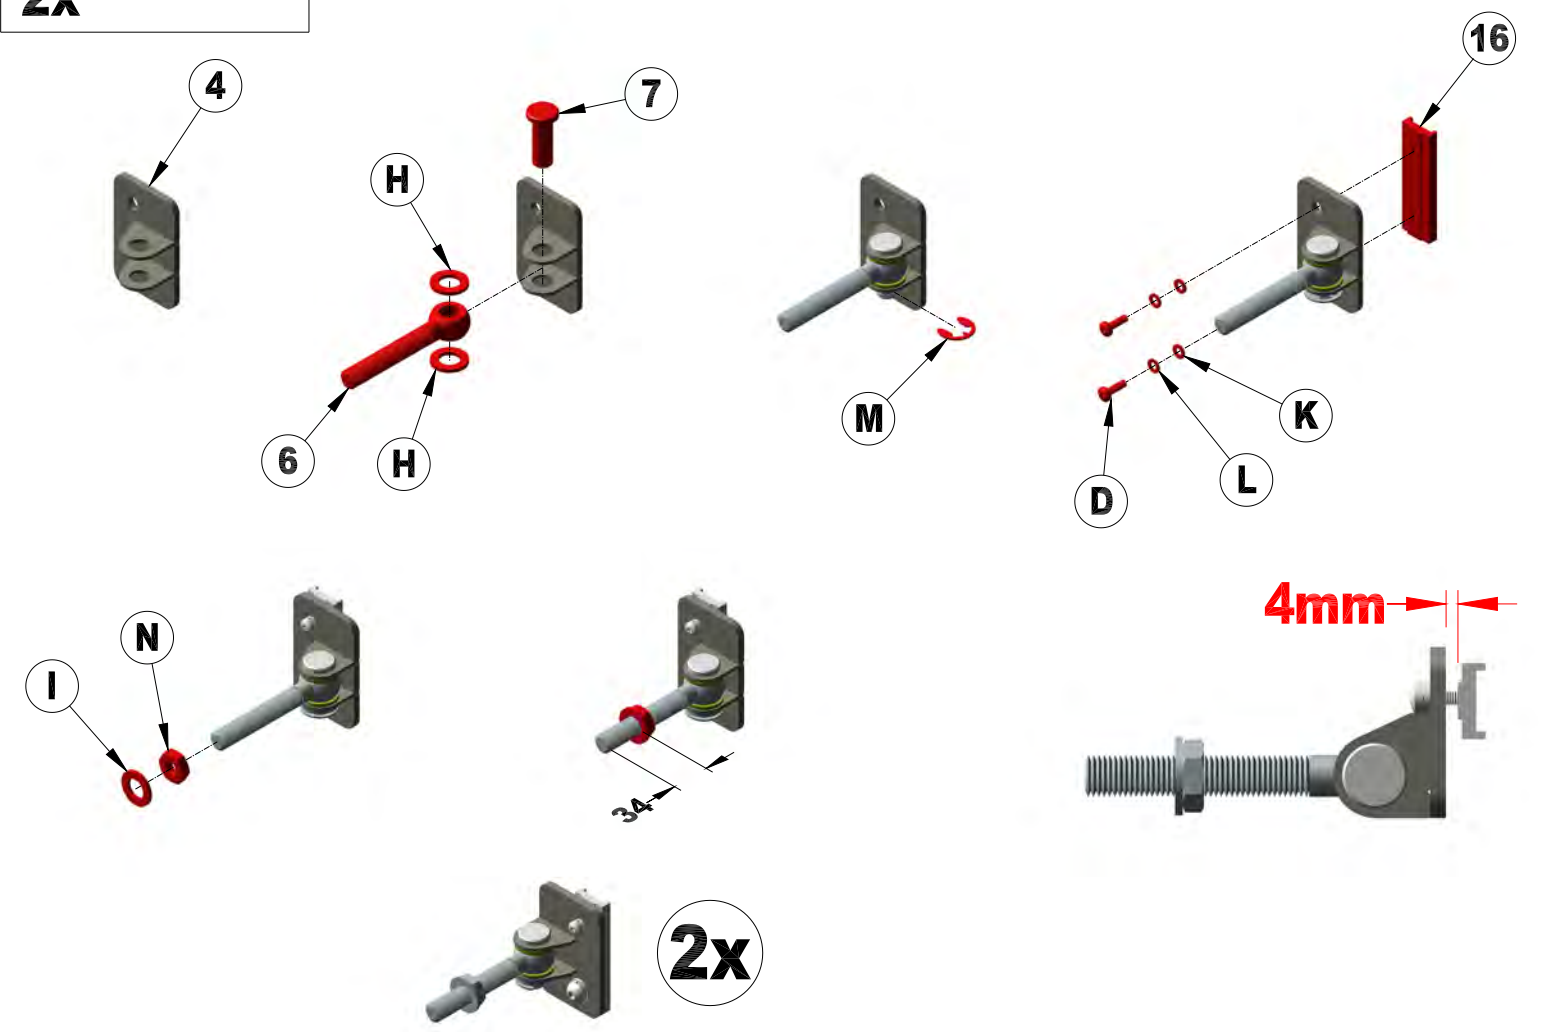


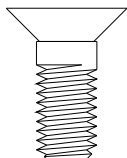
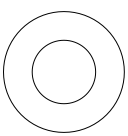

8  1x	9  1x	16  1x	M6x20 D  2x	M8x20 E  2x
S8 J  2x	S6 K  2x	F6 L  2x	M8 O  2x	 SW 5

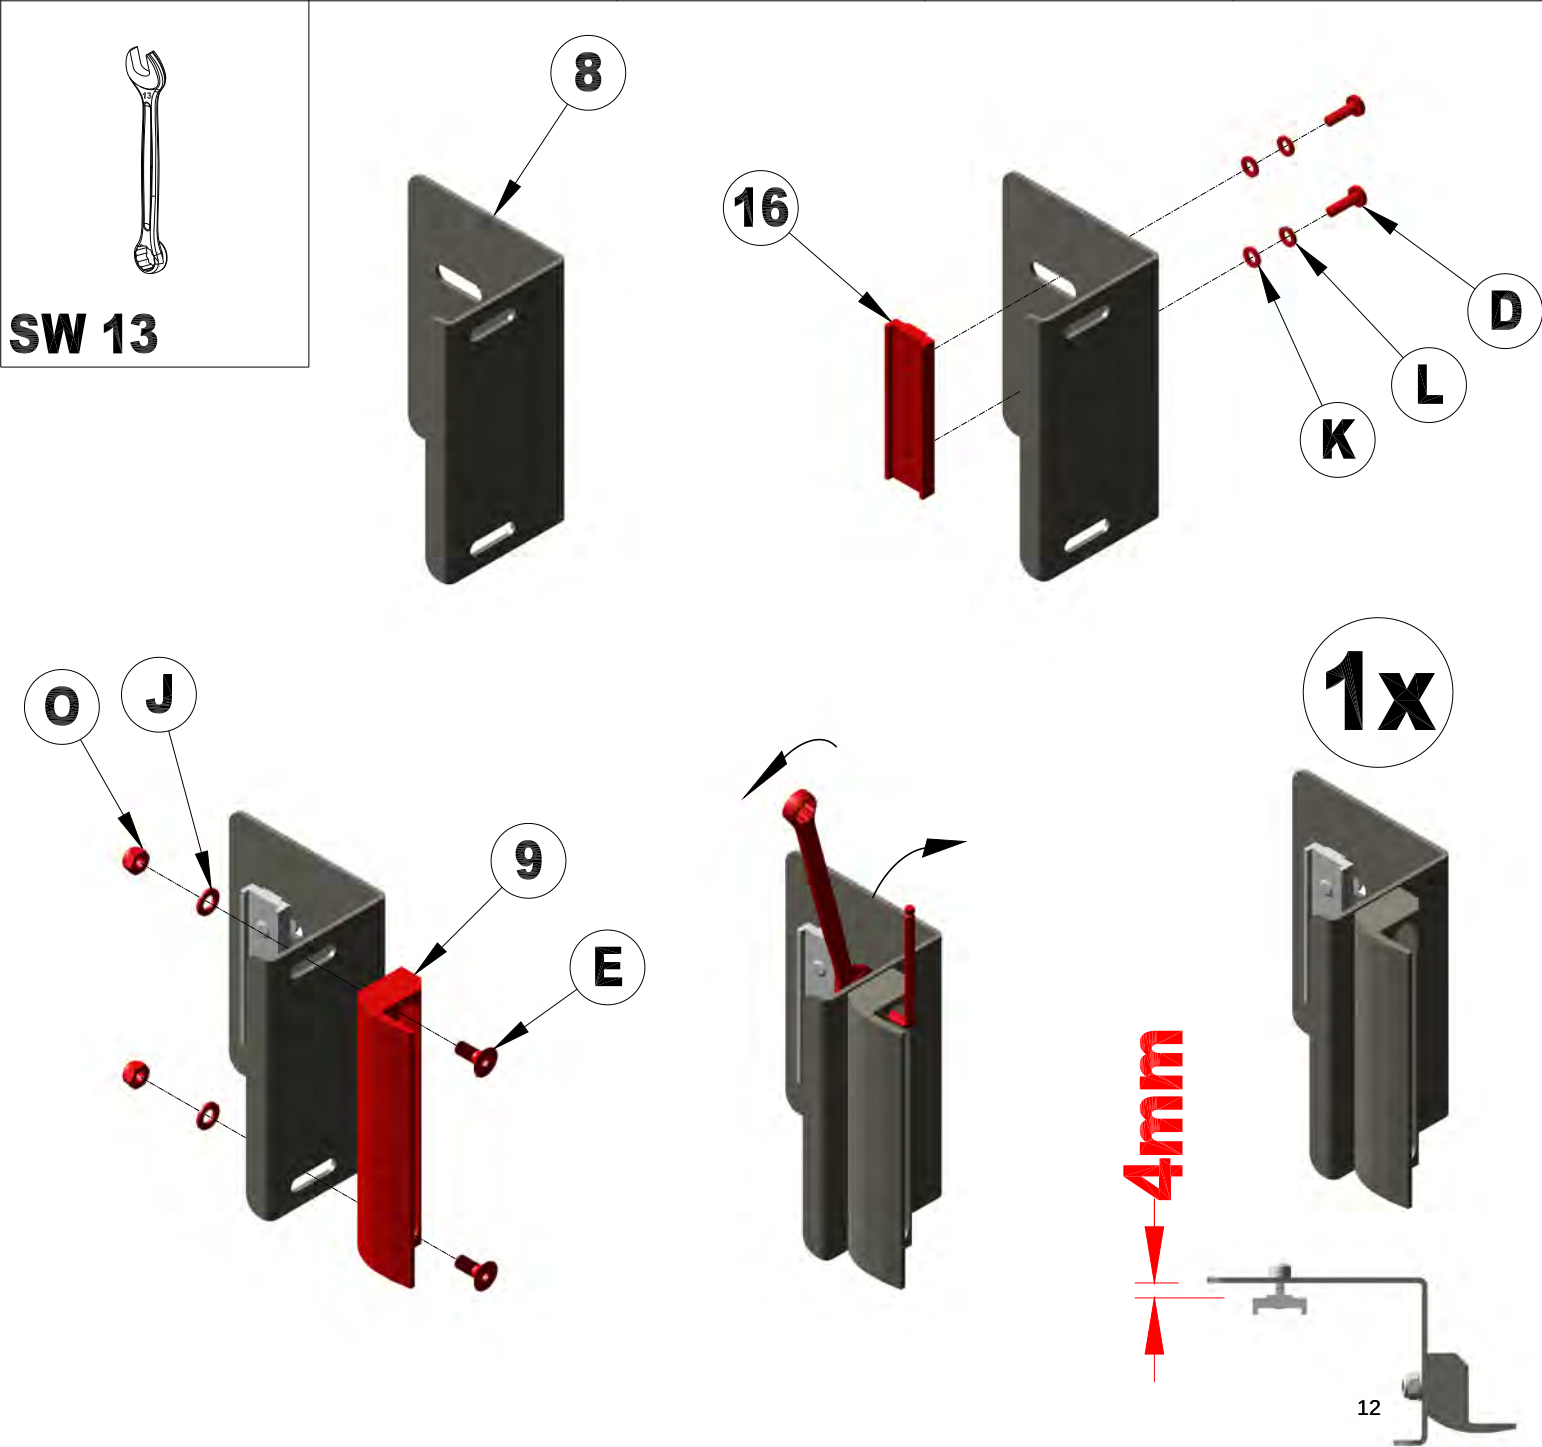

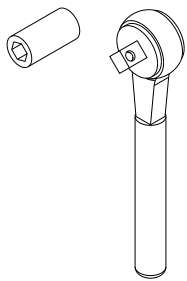


TX30

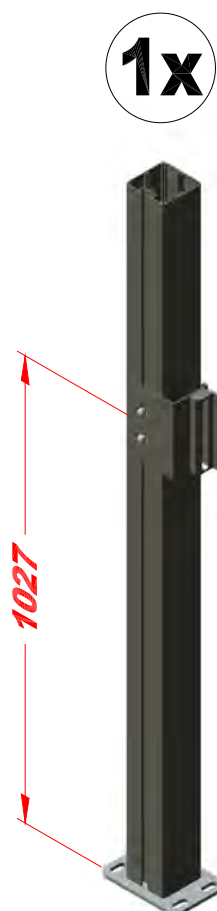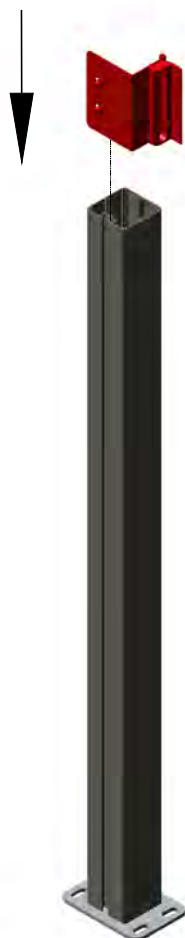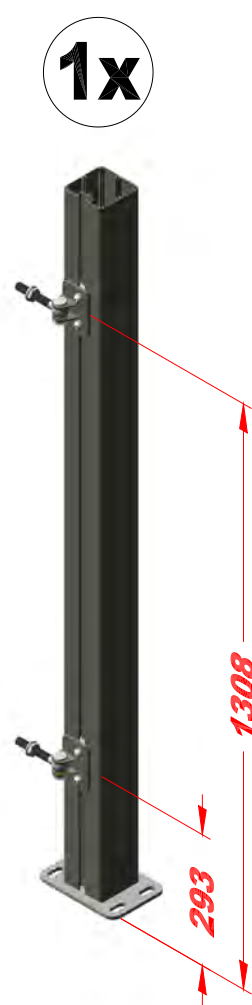

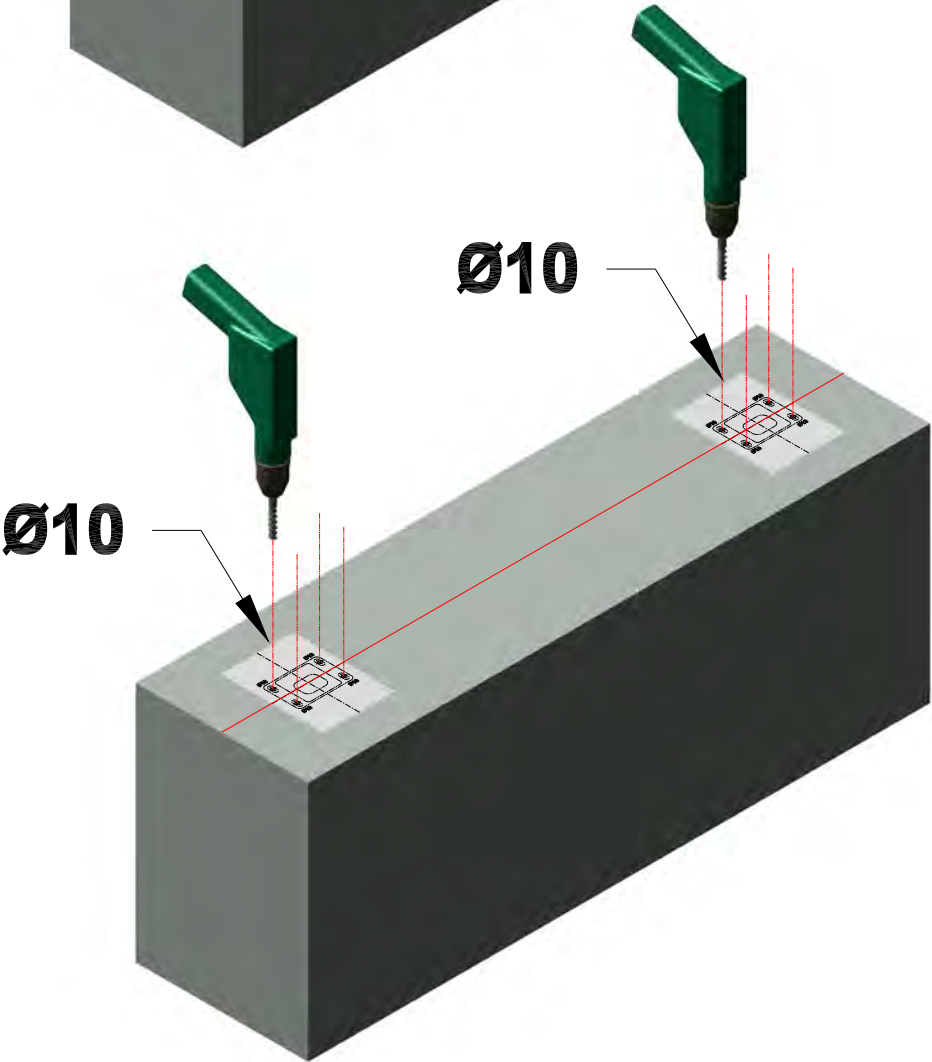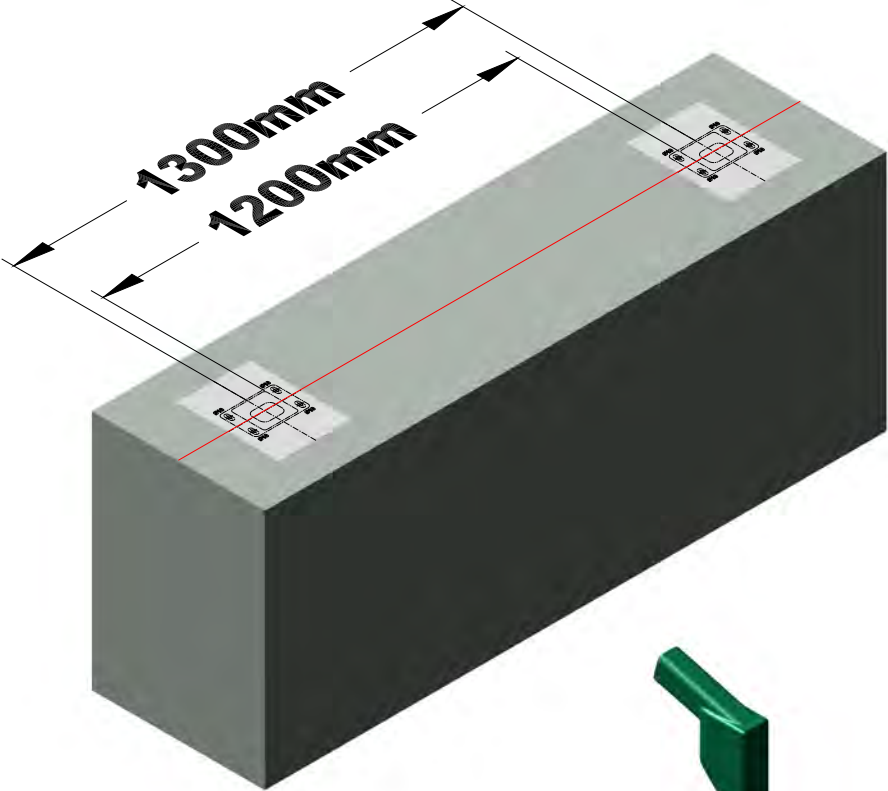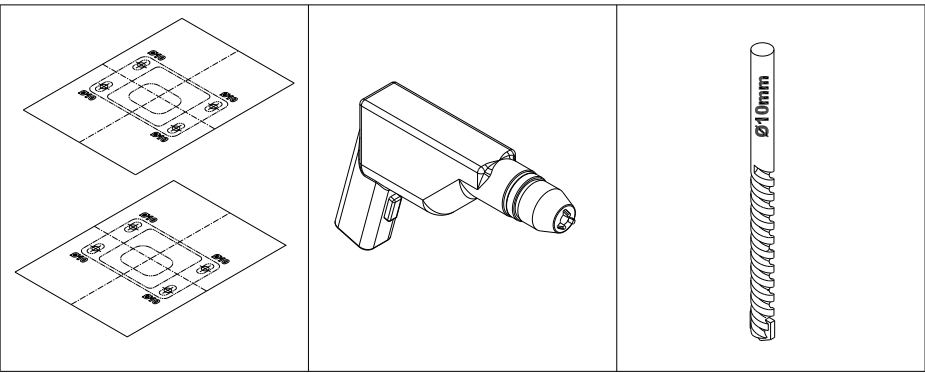

HSA M10x90


A

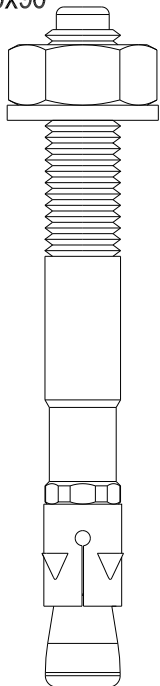

8x

M10-SW17

T

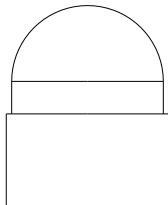


8x



SW 17











A





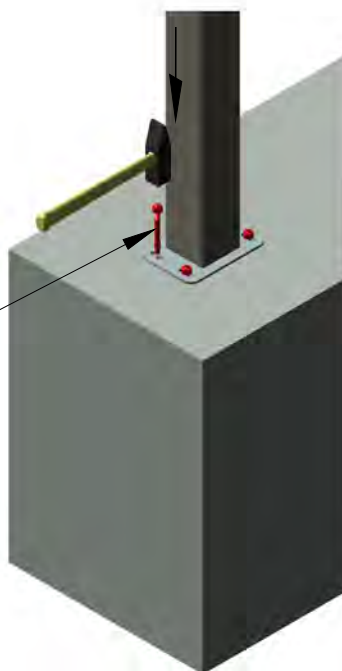










T





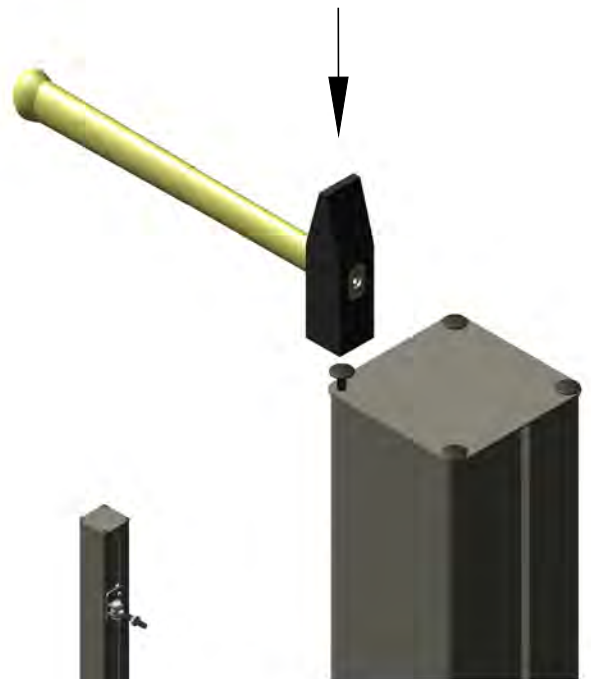
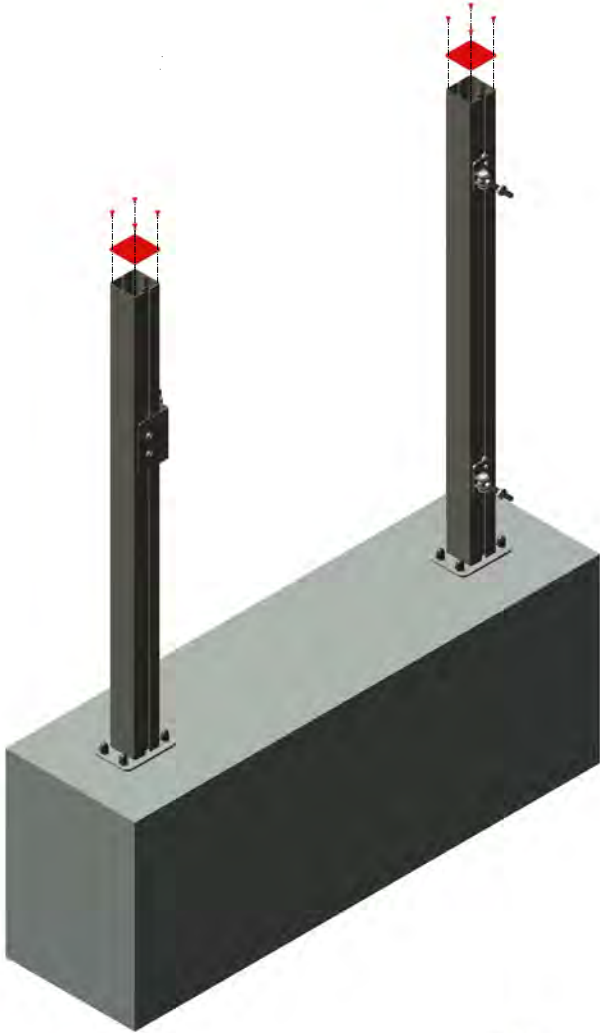
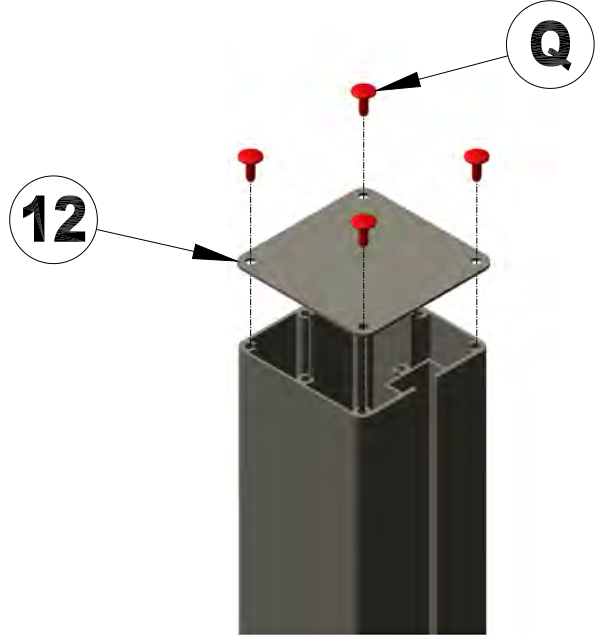
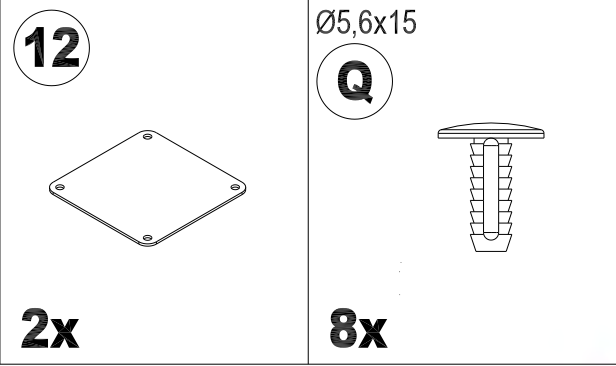


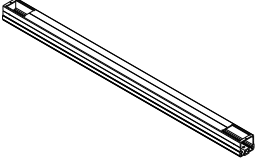

1  2x	2  1x	3  1x	M6x30 C  8x	 TX 30
---	---	---	--	--

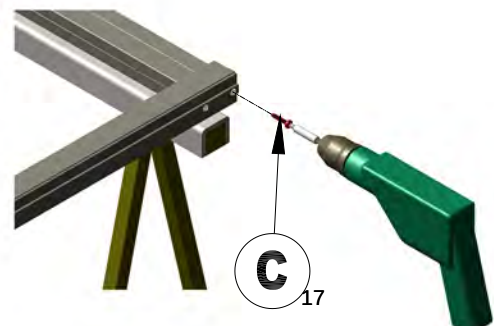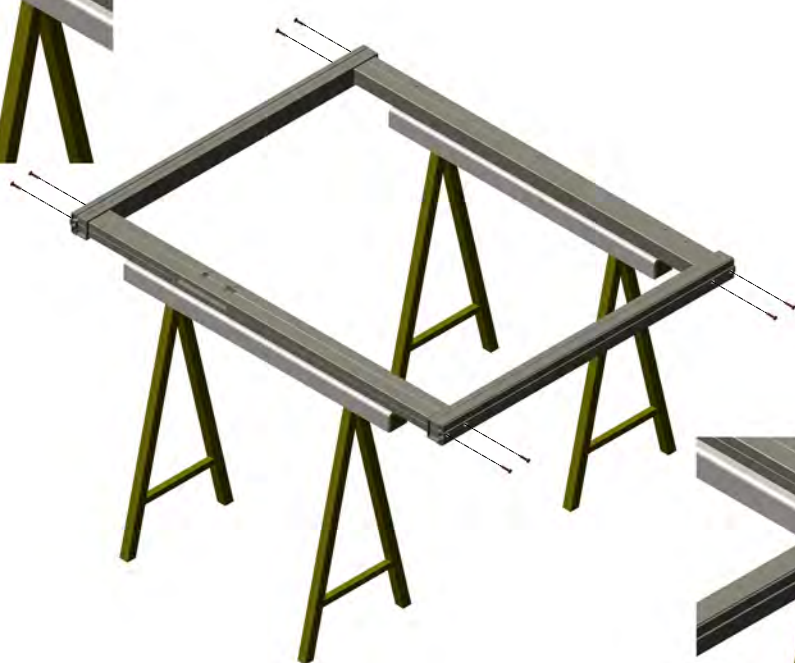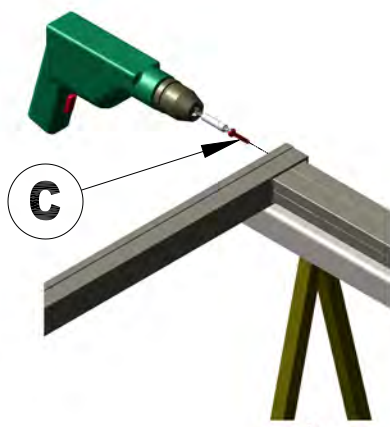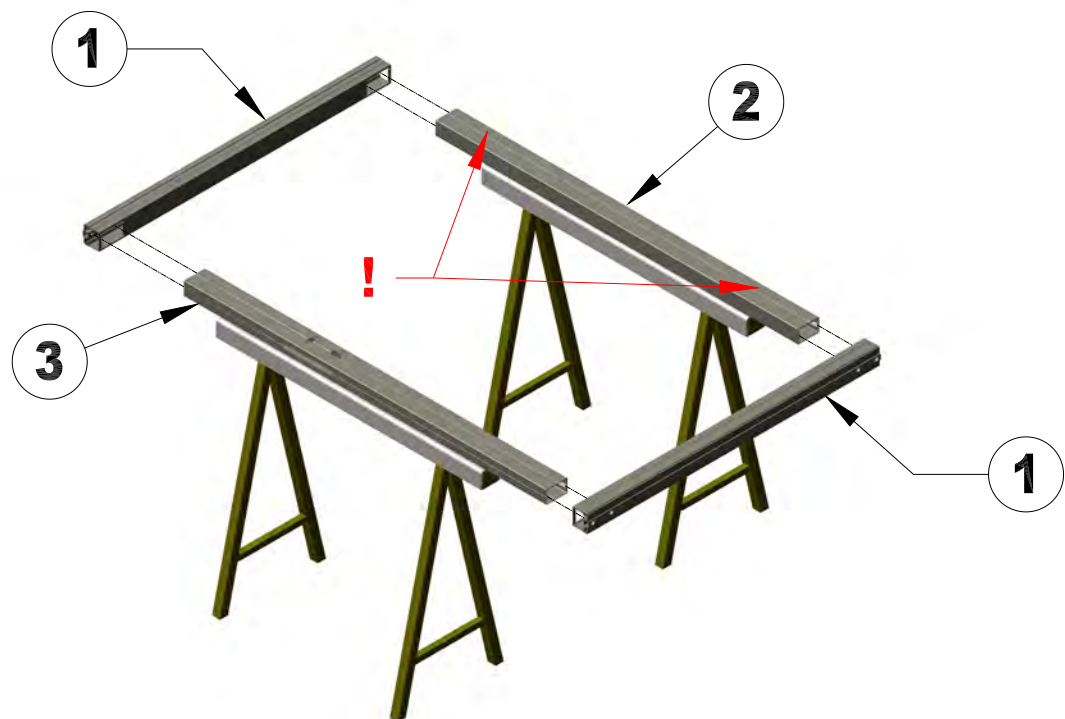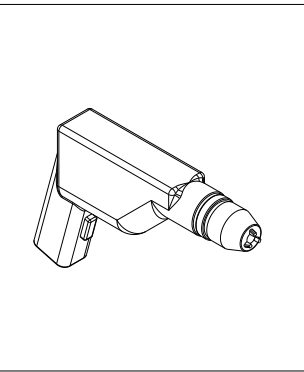

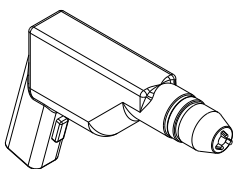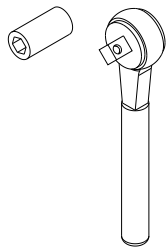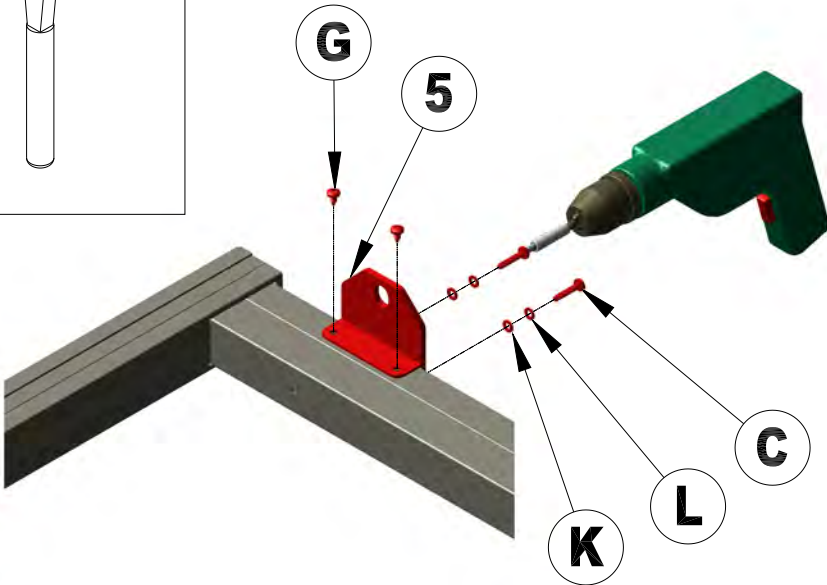5  2x	M6x30 C  4x	Ø6,3x13 G  4x	 TX 30	
S6 K  4x	F6 L  4x			

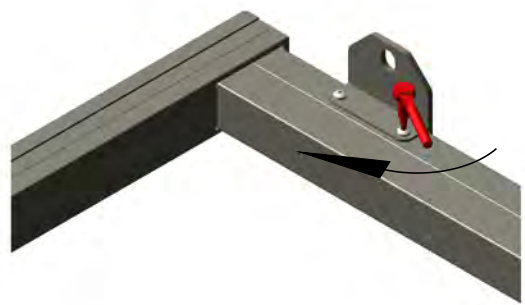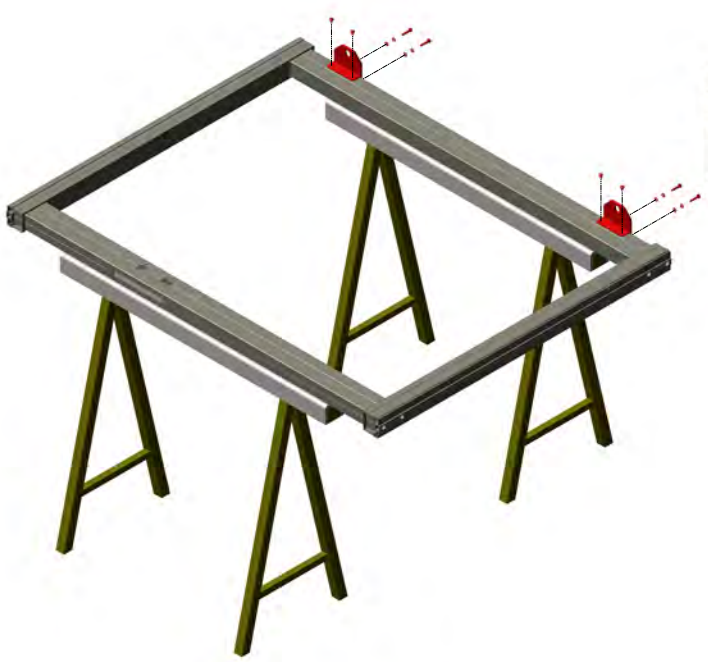

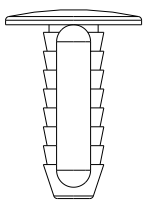10  1x	13  4x	M5x16 F  2x	Ø7x23 P  8x	Ø14 S  8x
---	---	---	---	---

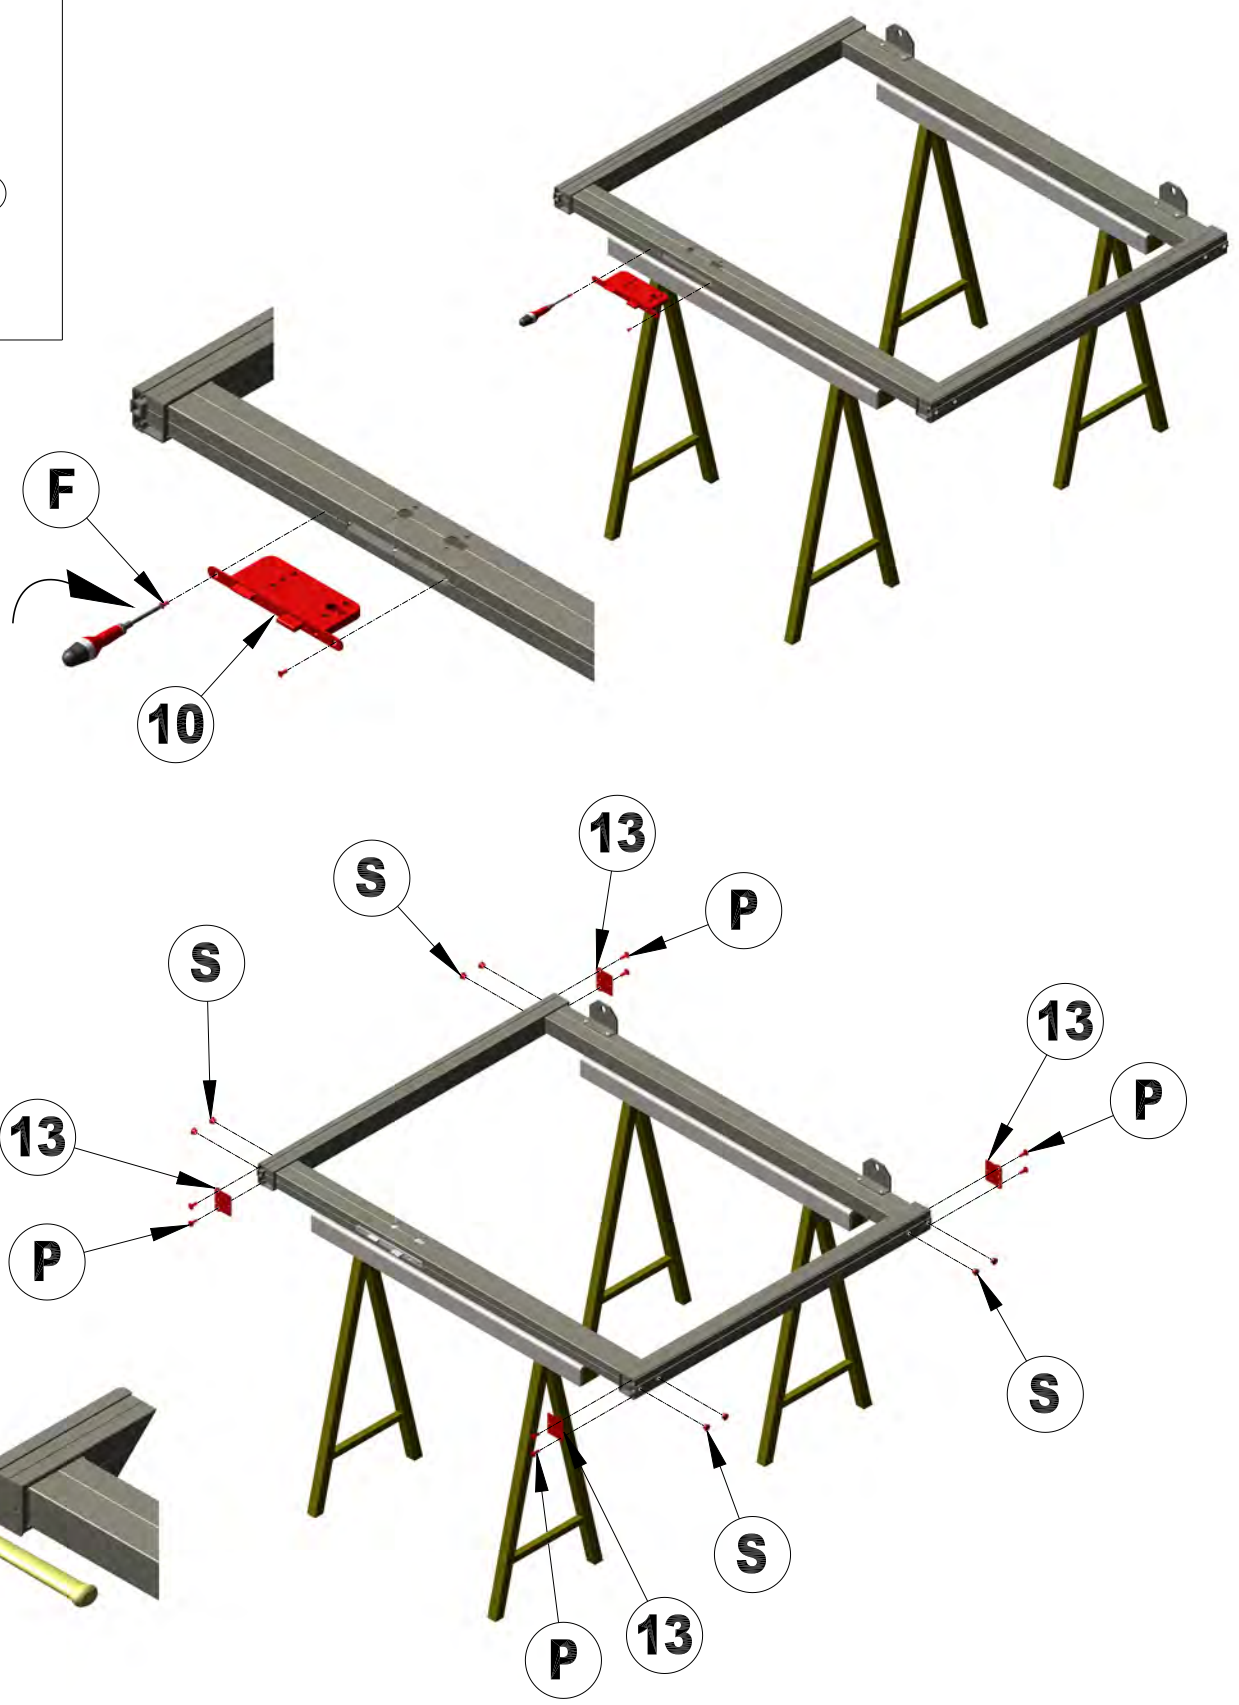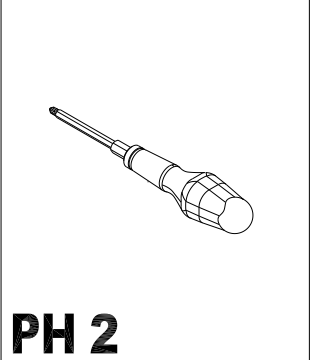

M16


N



2x

S16




I

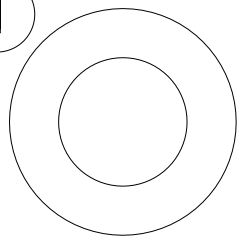


2x



SW 24

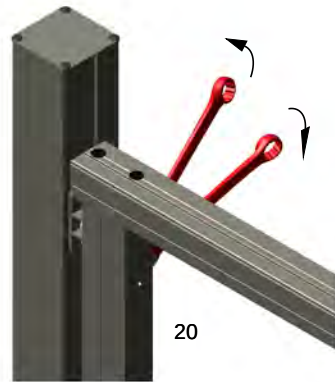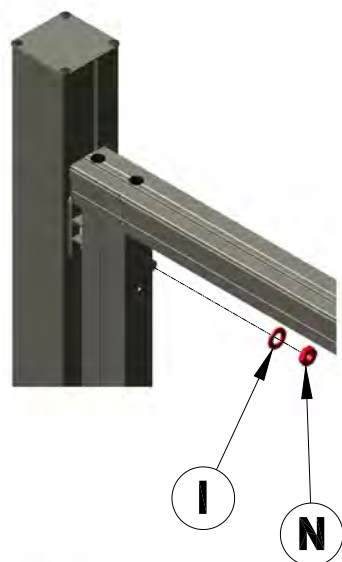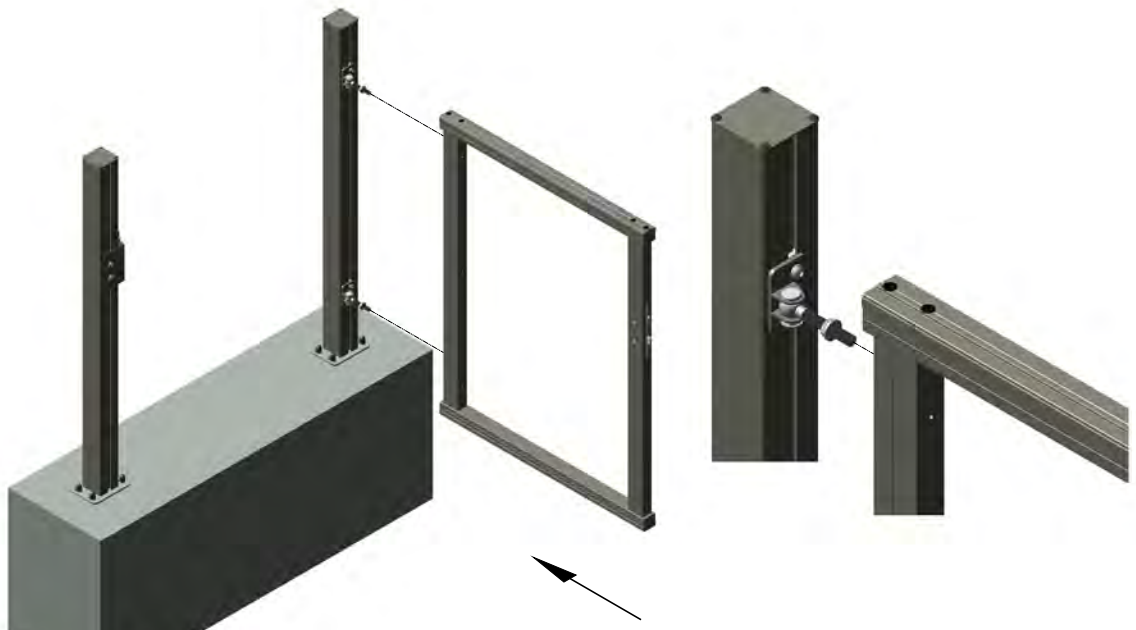


11

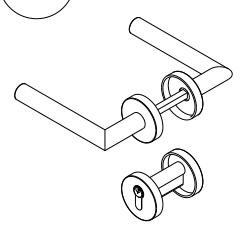


1x

Ø3,9x60






R



4x

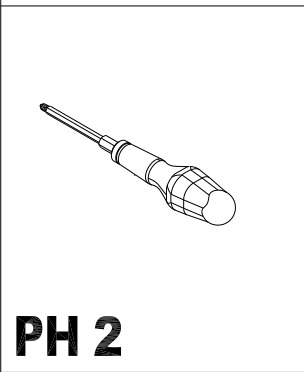

PH 2

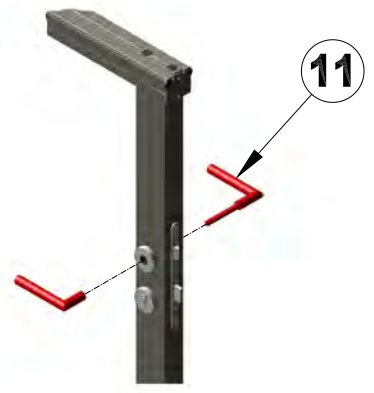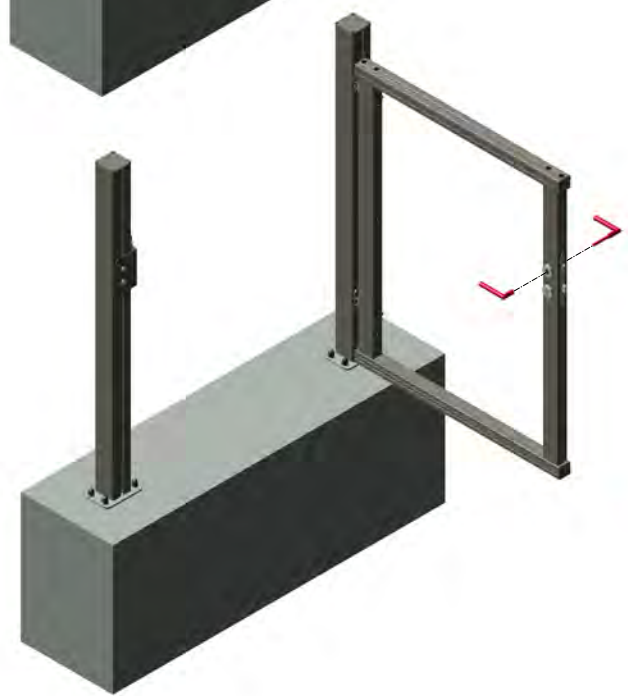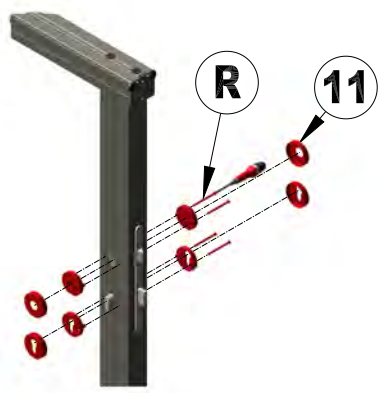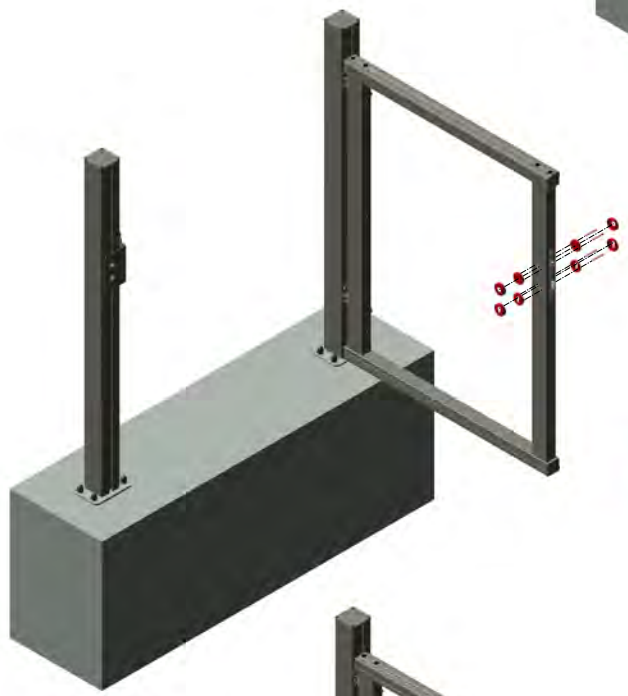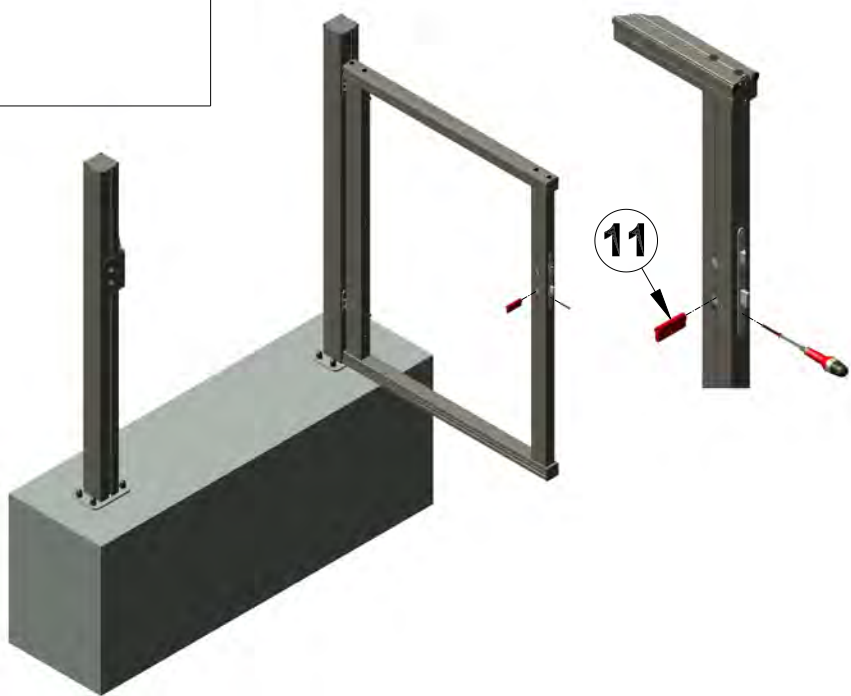






SW 3




Paczka 3

1x


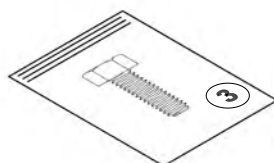
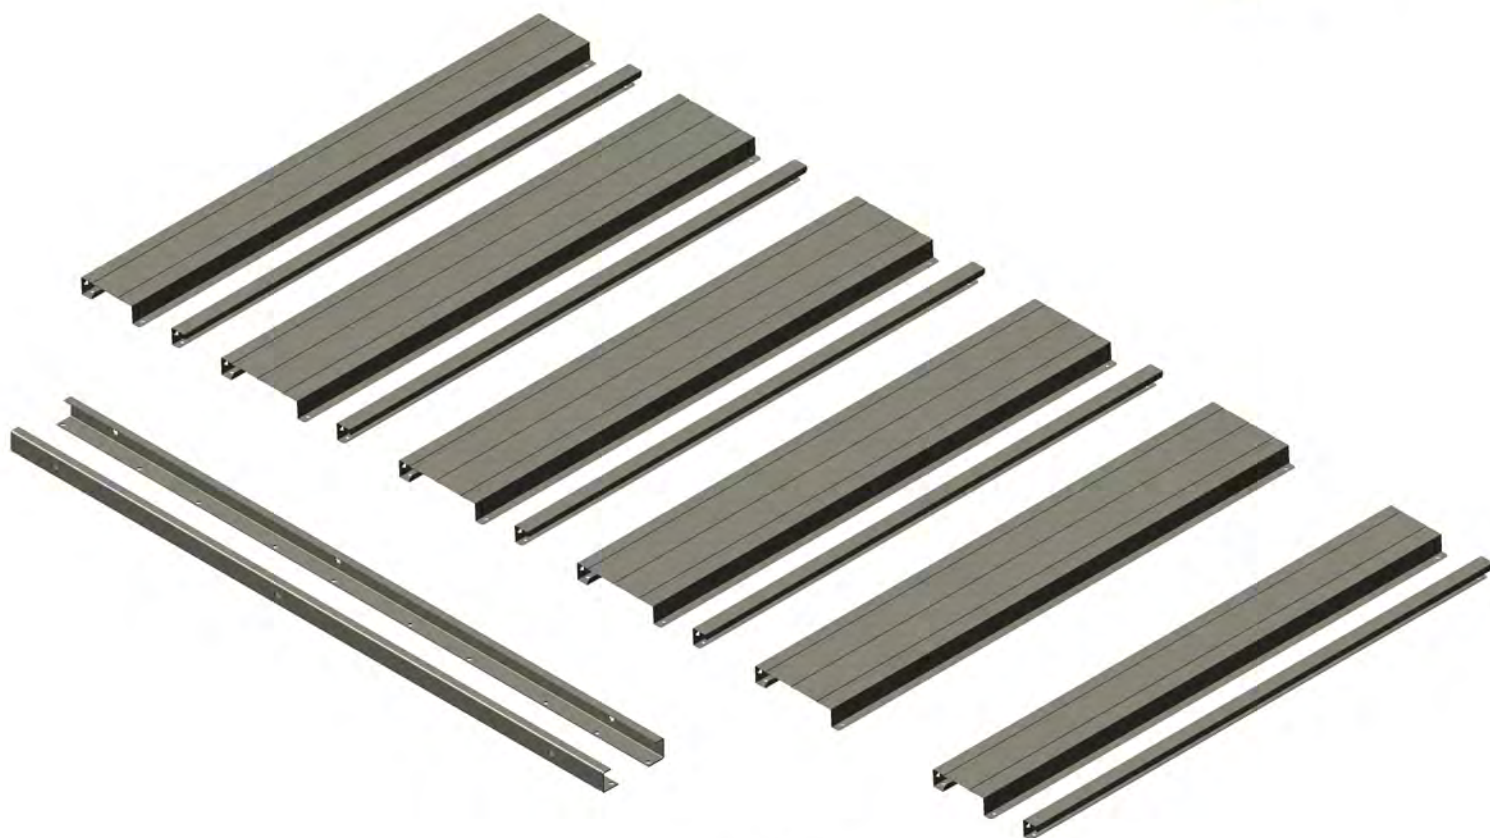
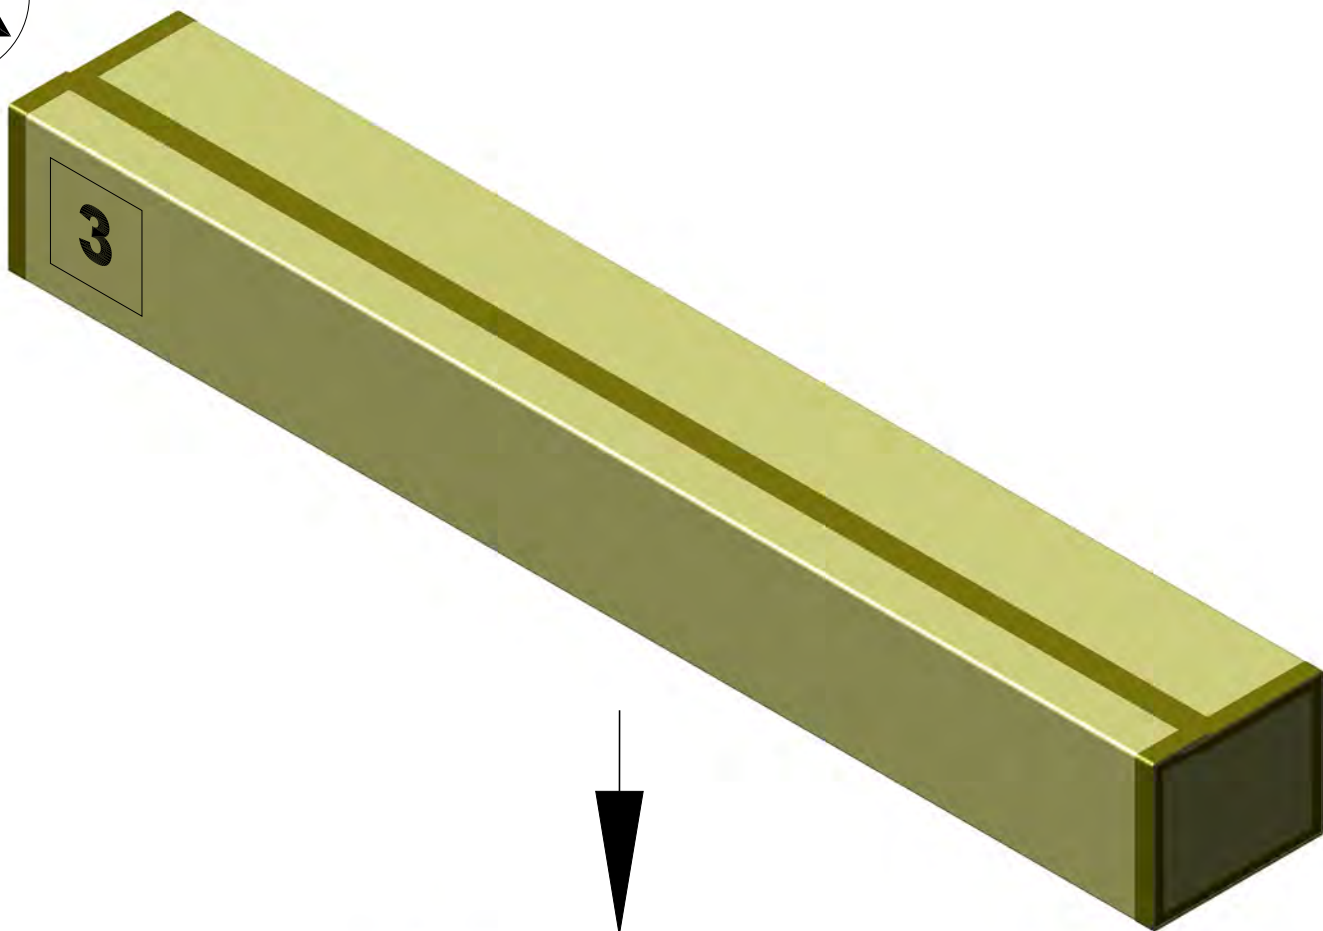


14**1x****15****1x**


Ø6x30

C**6x**

S6

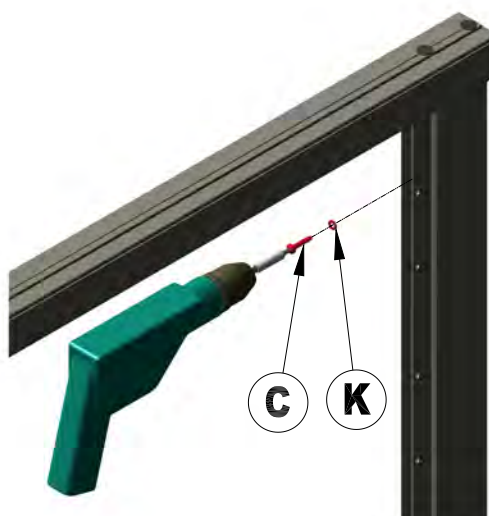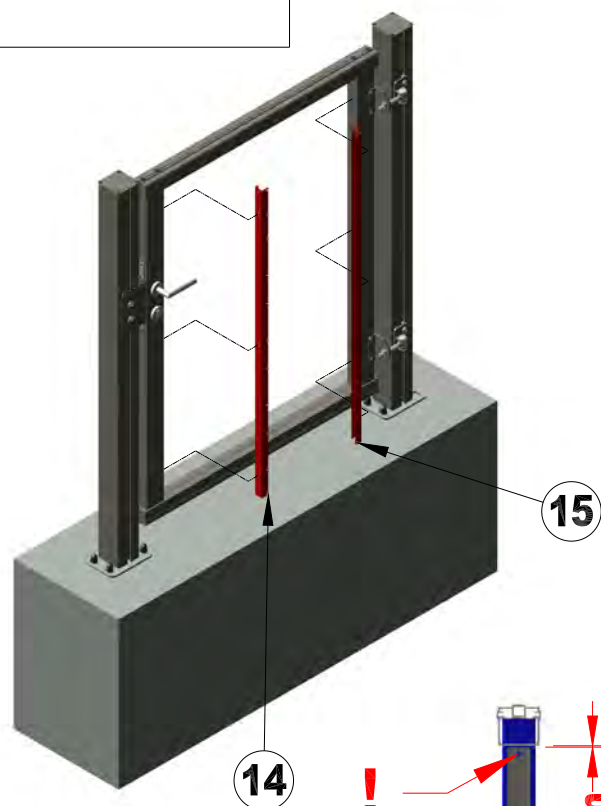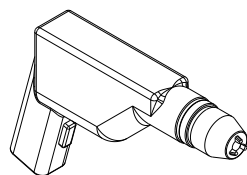
K**6x****TX 30**

17

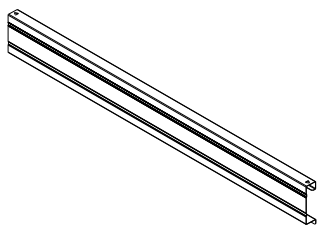

1x

19

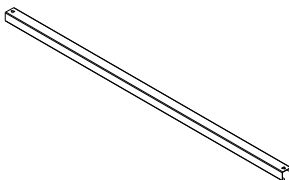

1x


17

100mm


19

ULICA

POSESJA

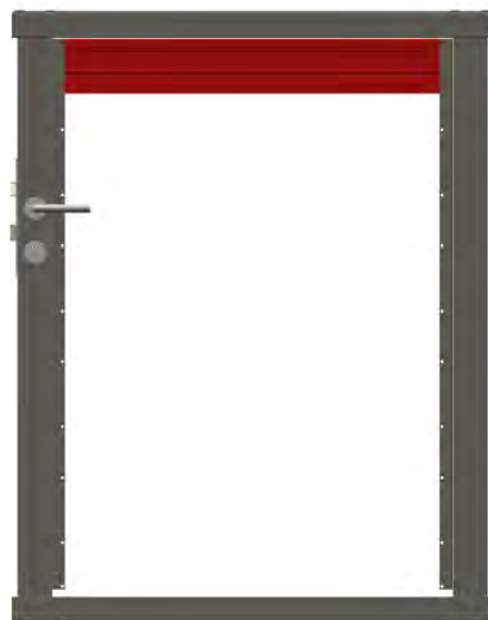


18

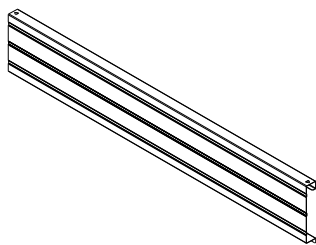

4x


19

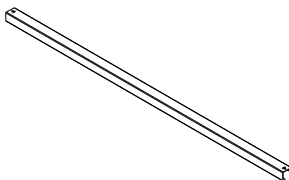


3x

Ø6,3x13

G




4x



TX 30





G

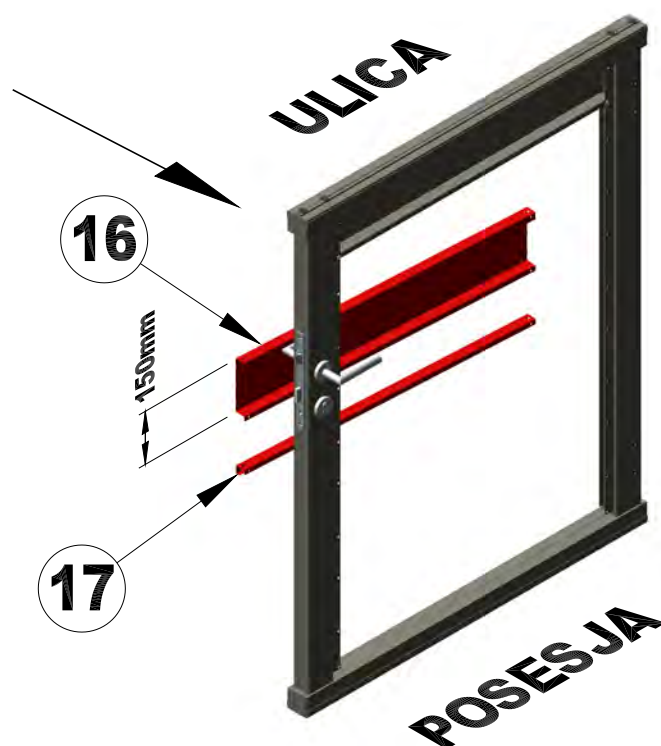


16

150mm

17

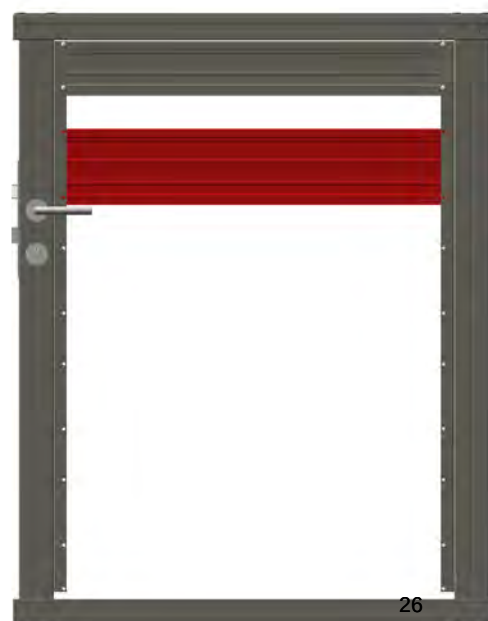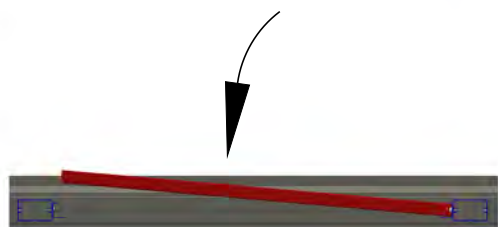


17

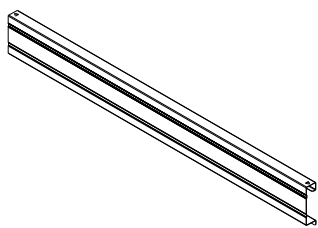

1x


19

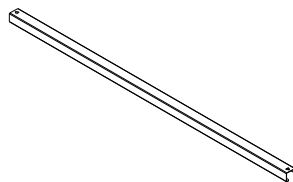


1x

Ø6,3x13

G




18x



TX 30



G

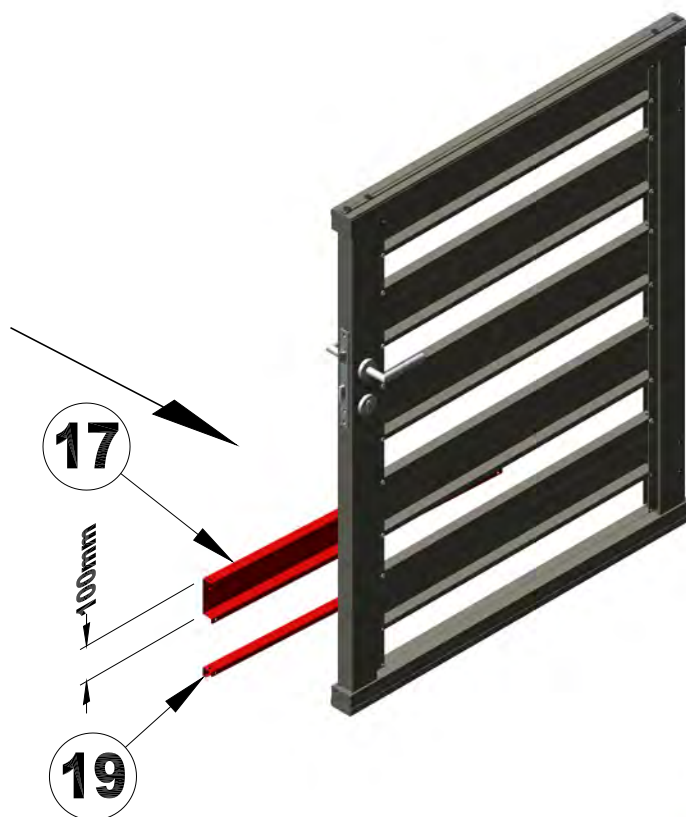

17

100mm

19



G



